




TEKS® SELF-DRILLING FASTENERS

Product Report No. 02703

Selector Guide

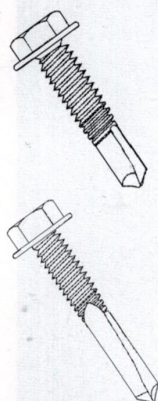

Part Number	Description	Head Style	Drill Point	Drill & Tap Capacity	Max. Material Attachment	Box Qty	Applications
1088000	12-24 x 7/8"	HWH	#4	.125-.250	.325	5,000	• Metal deck, clips, liner panels or accessories to structural steel or bar joist. • Longer fasteners can be used in retrofit clip and sheet applications.
1414000	12-24 x 1-1/4"	HWH	#4.5	.125-.375	.575	4,000	
1006000	12-24 x 1-1/4"	HWH	#5	.125-.500	.375	4,000	
1070000	12-24 x 1-1/2"	HWH	#5	.125-.500	.625	2,500	
1071000	12-24 x 1-1/2"	**HWH	#5	.125-.500	.625	2,500	
1072000	12-24 x 2"	HWH	#5	.125-.500	1.125	2,000	
1074000	1/4-28 x 3"	*HWH	#5	.125-.500	2.150	1,000	
1075000	1/4-28 x 4"	*HWH	#5	.125-.500	3.150	500	
1641000	1/4-28 x 5"	HWH	#5	.125-.500	4.150	250	
1431000	1/4-28 x 6"	HWH	#5	.125-.500	5.150	250	
1590000	1/4-28 x 8"	HWH	#5	.125-.500	7.150	150	

All available with bonded washer.

* 5/16" Across Flats HWH ** 3/8" Across Flats HWH

Performance Data

PULLOUT VALUES (average lbs. ultimate)						
Fastener		Steel Gauge				
Dia.	Pt.	16	14	12	3/16	1/4
12	4	-	-	1532	3485	3844
	4.5	-	-	1508	3865	4101
	5	-	-	1527	3701	3999
1/4	5	-	-	1507	3300	5059

FASTENER VALUES			
Fastener (dia-tpi)	Tensile (lbs. min.)	Shear (avg. lbs. ult.)	Torque (min. in. lbs.)
12-24 T/4	3020	2100	100
12-24 T/4.5	3020	2100	100
12-24 T/5	3020	2100	100
1/4-28 T/5	5577	3310	234

SHEET STEEL GAUGES								
Gauge No.	12	14	16	18	20	22	24	26
Decimal Equivalent	.105"	.075"	.060"	.048"	.036"	.030"	.024"	.018"

SHEAR VALUES (average lbs. ultimate)						
Fastener		Steel Gauge (lapped)				
Dia.	Pt.	16	14	12	1/8	1/4
12	4	-	-	2048	2030	-
	4.5	-	-	2641	2887	2897
	5	-	-	2650	2700	2762
1/4	5	1597	2005	2350	2792	3310

Installation Guidelines



A standard screwgun with a depth sensitive nosepiece should be used to install Tekes. For optimal fastener performance, the screwgun should be a minimum of 6 amps and have an RPM range of 0-2500. (Maximum 1800 RPM is recommended for Tekes 5 fasteners).



Adjust the screwgun nosepiece to properly seat the fastener.



New magnetic sockets must be correctly set before use. Remove chip build-up as needed.



The fastener is fully seated when the head is flush with the work surface.



Overdriving may result in torsional failure of the fastener or stripout of the substrate.



The fastener must penetrate beyond the metal structure a minimum of 3 pitches of thread.

TO FIND A DISTRIBUTOR CALL 855-800-8878

WWW.DIRECTMETALSINC.COM